

# How to version up firmware of RM-LP100

## [RM-LP100 FW Update Procedure ]

1. Please format the USB memory by FAT32.  
(It does not recognize if you format other than FAT32.)
2. Please input the update file(\*.bin) to the root folder of USB memory.
3. Please connect the USB memory to SERVICE terminal of RM-LP100.
4. Please turn on the POWER switch while holding down "USER1" and "USER2" button  
(■ 2 button on the upper left).
5. Please press and hold the button until the "USB Firmware Update Mode" screen.
6. Please check the displayed firmware version is same as the version that was input the USB memory.
7. Please push "Update" button.
8. Please push "OK".  
--> Firmware update Start.
9. Firmware writing was completed.  
Please turn off and reboot.

## [ RM-LP100 Firmware Confirmation procedure]

1. Please turn in the POWER Switch while holding down "USER1" and "W" (ZOOM Switch).
2. Please press and hold the button until the "ADJUSTMENT MODE" screen.
3. Please push "Status Display" button.  
--> "STATUS DISPLAY" Screen will appear.
4. Please check Version.
5. Please push "RETURN" button, and then push "Exit" button.
6. Please turn OFF the Power Switch.